

Medical Alert / Emergency / Hotline Auto Dialer

Hotline Auto Dialer Manual



Installation:

1. Plug the PSTN line into the dialer's "line" socket.
2. Plug the phone cable into the dialer' "phone" socket.
3. No battery needed. No external power connection.
4. The " IP" LED will light up when the dialer is in action.
5. The "IN USE" LED will light up when the phone is picked up.

Programming:

1. To add the number to be dialed out: Using the telephone connected to the 'PHONE' socket, lift off the handset and enter the following:

1. *****518888** wait to hear 'BEEP' — log in the system*.
2. ***01*1* number**** wait to hear 'BEEP' — stores the number.
3. Hang-up

Numbers can be any digits 0-9 and # (except *)

2. Reset the dialer to factory settings (e.g. removes the number to be dialed) Using the telephone connected to the 'PHONE' socket, lift off the handset and enter the following:

1. *****518888** wait to hear 'BEEP' — log in the system*.
2. ***00**** wait to hear 'BEEP' — resets dialer.

* Note: You need to start inputting the digits using a dial-pad of your analog phone within 1 second from lifting up the handset. Otherwise, the dialer will automatically dial the number in stored.

For additional support, please visit hqtelecom.com