


Instructions Manual for [411 Blocker](#)

Model 323-2GHQ-411

411 BLOCKER INSTALLATION

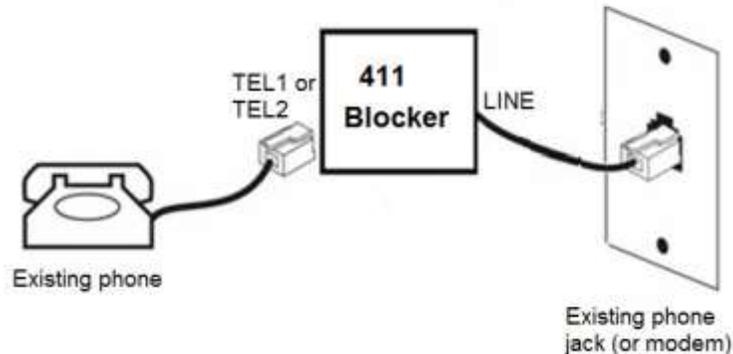

Congratulations on your purchase of a 411 Blocker Model 3232GHQ-411.

To install your [411 Blocker](#), follow the steps below:

Please use the diagram shown above as reference.

- 1) Unplug the existing telephone cable from your existing phone
 - 2) Plug this cable into the LINE port of the 411 Blocker
 - 3) Plug one end of the new telephone cable (e.g. patch cord included with your 411 blocker) in the TEL1 or TEL2 of the 411 blocker.
 - 4) Plug the other end to the existing phone socket (same place where you removed the existing cable in step1).
- Done!

PROGRAMMING:

To program your call blocker, after installing your call blocker as shown in the diagram above, use the existing phone's dialpad to enter the following:

- Step 1: Lift off the handset (wait hear dialtone)
- Step 2. *** wait to hear 'BEEP' -- Set programming mode
- Step 3. **9** wait to hear 'BEEP'— enters setup mode.
- Step 4. **5**411*1411** wait to hear 'BEEP' — block 911 calls

If you wish to block additional area codes, prefixes or phone numbers, replace step 4 with the following:

- Step 4. **5**PREFIX1*PREFIX2*PREFIX3** wait to hear 'BEEP' — block calls that start with any prefix or area code e.g. 911, 411, 311, 305, 212

Where 'NUMBERX' can be up to 5 numbers, and the added combination of all the digits cannot exceed 32 digits. For example:

NUMBER1 = any 3 digit number e.g. 911 or 411 or any 3-digit area code

NUMBER2 = any prefix e.g. 800-555 or 305-558

NUMBER3 = any 10-digit phone number e.g. 305-528-3484

So, you can block up eight 3-digit numbers, or up to 5 prefixes or up to 3 10-digit phone numbers.

Disclaimer: In some states there are laws stating that you cannot block access to 911 calls. It's your responsibility as the owner of your phone line, to make sure you are not in violation of these laws.

If you need any additional help or support, please contact us at www.hqtelecom.com.